

Vibro Massage Kit Manual

Model No.NHX0322HLL

Controller pannel &LCD instructions



Operation manual

- Plug the AC Adapter into a power supply and input the DC end to the outlet of controller.
- Press **ON/OFF** to startup massage kit. It runs from mode 1st to 10th in automatic style(signal be on, each mode switch to next mode per 1 minute). Default timer is 15 minutes, default intensity is in grade 5. Press **ON/OFF** again to stop work,
- Press **INTENSITY** to choose massage intensity, the signal **IIIIIII** will be indicated more until full, totally 10 grades
- Press **AUTO** to set automatic mode circle, and press again to get manual style (signal lamp will be off), and you can choose ten massage modes.
- Press TIMER to set up running time within 5~60 minutes. Default running time is 15 minutes.
- Press **MODE** \triangle /**MODE** ∇ to Select different manual vibration mode(signal \square lamp will be off), totally 10 styles.
- Press **POINT** to point the certain massage zone such as back or buttocks or thighs or legs.
- Press **HEAT** , the heating function will be on.
- Press **UP** and **DOWN** to control the actuator up and down.

How to deal with the trouble case?

Vibrators don't work	1、Controller handset	1、Power on the handset, and
	open or not.	operate as per the instructions.
	2. Power supply has no	2、Check the power supply has
	good touch with	been correctly connected to the
	socket.	socket
	3、Whether the	3 、Input: Related Parameter
	transformer is	Output:29V/2A
	appropriate	
Vibrators suddenly stop	1 Automatically stop	1、Restart the handset.
or runs in wrong	work because of default	2 Power off and disconnect with
order.	timer.	power supply socket, restart and
	2、wrong operations.	power on after 20 minutes.
	3 Connector not be	3 Check all of the related
	connected well	connector and reconnect



Nordbutiker AB 76141 Norrtälje +46 10-555 9123 info@blimo.se